















 









 










# AS 33, AS 34, AS 40

## Short-form operating instructions for system telephones

Feature	Operation
<b>Displaying the outside line seizure variant</b>	   The current variant is displayed 
<b>Spontaneous outside line seizure variant with internal</b>	You reach an external subscriber simply by dialling the corresponding phone number. The telephone system automatically seizes a dial-up line (B-channel). To reach an internal user, you must first press the internal key and post-dial the internal phone number.
<b>"0" outside line seizure variant</b>	You reach an external subscriber by dialling a code, e.g. "0", and the corresponding phone number. You reach internal users simply by dialling their internal phone numbers.

**Functions**  
The **Functions** section describes the convenience functions of the system telephone, regardless of the external dialling variant. You can only execute the functions marked \* if the corresponding function key is defined on your system telephone.

### Spontaneous outside line seizure variant with internal

<b>Internal call*</b>	  Internal key  
<b>External call</b>	   If you wish to communicate a specific multiple subscriber number of your telephone system, press the corresponding MSN/external to seize an outside line
<b>Dialling with the receiver on hook</b>	    
<b>Preparing dialling and dialling</b>	   or 
<b>Internal forwarding with announcement*</b>	 External call  Internal key    External and internal parties are connected
<b>Internal forwarding without announcement*</b>	 External call  Internal key   External and internal parties are connected
<b>External forwarding*</b>	 External call  Brokering    Transfer 

**Picking up an external call**



**Picking up an answering machine call**



**Inquiry\***



**External/internal brokering\***



**External/external brokering\***



**Internal conference\***



**External conference\***




**"0" outside line seizure variant**

**Internal call**



**External call**

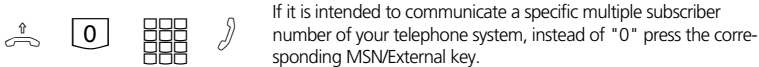

**Dialling with the receiver on hook**



**Preparing dialling and dialling**



**Internal forwarding with announcement**



**Internal forwarding without announcement**



**External forwarding\***



**Picking up an external call**



**Picking up an answering machine call**



 
**Inquiry**



**External/internal brokering\***



**External/external brokering\***



**Internal conference\***




**External conference\***



**Functions**


**Answering a waiting call\***

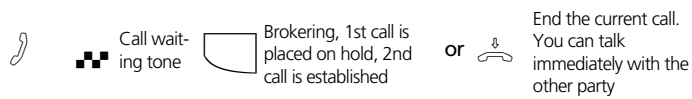

**Rejecting a waiting call\***



 **Programming and switching call waiting prevention**




**Initiating call waiting announcement/return call**



**Picking up calls\***



 **Forwarding a call during ringing**




**Call list – entering your number**



**Displaying the call list**



 **Programming and switching do not disturb**



**Do not disturb on/off**



**Call variant 2 on/off**



**Call variant 3 on/off**



**Announcement via audio module\***



**Programming automatic dialling**

set 5 6 External phone number set

**Automatic dialling on/off**

set 1 \* 1 = on 0 = off set

**Busy on busy**

set Busy On Busy or 1# next Select phone number 1 = on 0 = off set

**Voice message with hands free operation\***

Voice message Enter internal user if no group is defined enter Make the voice message

**Hands free operation**

Keep key pressed Release key, hands free Press key again, end call

**Changing function keys\***

set 3 1 Function key next Select function enter set

**Group formation\***

set Voice message or pick up Enter internal phone numbers of group set

**Placing calls on hold (ISDN)\***

ISDN hold ISDN hold, return to 1st call esc End current call

**Identification (ISDN identification of malicious callers)\***

Identification Continue call or

**ISDN three-party conference\***

ISDN hold Conference

**Memory phone/storing names**

Phone number/name in display set Store display set Return to standard display

**Phone number display/dialling\***

Memory Memory or next Select phone number/name Phone number is dialled automatically

**Network code (Call by Call) \***

Call by Call Code and phone number of the subscriber or post dial with the redial last number function or a destination key. Phone number is dialled automatically

**Parking Parking a call**

External call enter

**Unparking a call**

enter

**Room monitoring on/off**

set 1 0 1 = on 0 = off enter Audible warning 1 = on / 0 = off set

**Room monitoring by an internal user**

Internal phone number of the guarding telephone Listen into the room

**Relay on/off\***

Relay

 

 


**Callback on busy (ISDN)**

 External call  Busy tone  CCBS?  enter  Callback is initiated






**Viewing status messages**

 The display shows "!"  next Scroll in the messages  esc






 

**Entering user names**

    Enter name with the digit keys 


**Phonebook (numeric)**

 Phonebook  Switch between alphabetical and numeric sorting  Enter speed dialling number  

**Phonebook (alphabetical)**

 Phonebook  If necessary, change sort order  Initial letter   If necessary, 2nd letter  






**Redialling a phonebook entry**

 Phonebook  Display of the entry used last  

**Locking/unlocking a telephone\***

 Telephone lock  If necessary, enter code


**Locking/unlocking a telephone without a function key**

    1 = Locked 0 = Unlock  If necessary, enter code


**Storing an appointment call**

  Appointment or 15  Time   Date 





**Appointment call on/off\***

 Appointment When an appointment is on, the clock symbol can be seen on the display




**Door call variant 2 on/off**

  Call variant 2 or 11  next Select the door phone number  1 = on 0 = off 










**Actuating a door intercom system/door opener\***

 Door call  Door conversation  Door The door opener is activated for 3 s 

 




**Calling a door station/picking up a door call\***

 Door  Door call 

**Communication of your phone number on/off to the called party to the caller**

 Incognito or    . . .     1 = on 0 = off 

**Diversion from (follow me)**

  Diversion from or 18  Internal phone numbers  1 = on 0 = off 

**Diversion from on/off**

Diversion from or set 18 permanent or deactivated

**Programming and switching diversion to / door call diversion**

Diversion to or 17 Internal phone number or door call number for diversion To internal user/ to external user

→ Destination: phone number Enter diversion mode 1 = permanent, 2 = on busy, 3 = if no answer 1 = on 0 = off

on/off

Diversion to or set 17 permanent or deactivated

**Programming call forwarding (ISDN)\***

ISDN call forwarding Select position Select phone number for diversion

→ Forwarding destination Select forwarding variant 1 = permanent, 2 = on busy, 3 = if no answer (after 15 s)

on/off\*

ISDN call forwarding If necessary, select phone number for diversion Wait for acknowledgement from the exchange

**Displaying connection costs last connection\***

Units or set 71 Still available amount or costs total

**Redial simple**

The last dialled phone number is displayed and dialled

extended

The last dialled phone number is displayed Display one of the last five dialled phone numbers Displayed phone number is dialled

Automatic

e.g. redial or every displayed external phone number Automatic redial begins if party answers or

**Wake-up call storing**

Wake up or 16 Time 1 = immediately on 0 = activate later

on/off\*

Wake up If necessary, return to standard display

Switching off during wake-up call

Wake-up call

**Speed dialling\* storing**

Destination key External phone number Enter name Set next destination key or

dialling

Destination key






 
 
 
 


**Least Cost Routing \* on/off**

LCR

Timer on/off\*

Timer Timer 1 = on 0 = off Function 1 = on 0 = off

### System telephone settings

<b>Tone ringing volume</b>	set	2	1		Digit 1 (low) to 7 (high) You hear a brief sample tone	set	
<b>Tone ringing tone</b>	set	2	2		Digit 1 (very slow) to 7 (very fast) You hear a brief sample tone	set	
<b>Display contrast</b>	set	2	3		Digit 1 (more from front for good observation) to 7 (more from top for good observation)	set	
<b>Microphone automatically on</b>	set	2	4		Digit 1 = on Digit 2 = off	set	
<b>Open listening volume</b>	set			Open listening volume or 25		Digit 1 (low) to 7 (high)	set
<b>Headset volume (only ST 25)</b>	set	2	6		Digit 1 (low) to 5 (high)	set	
<b>Telephone code</b>	set	2	7		Four-digit telephone code	set	
<b>Cost display</b>	set	2	8		1 = Cost display on 0 = Cost display off	set	
<b>Status display / date</b>	set	2	9		1 = Status display on 0 = Date on	set	
<b>Language changeover</b>	set	2	0	next	Select language	set	
<b>Call list on/off</b>	set	2	*		0 = call list off 1 = on (number and name) 2 = on (name only)	set	
<b>Setting outside line seizure</b>	set	2	□		1 = automatic outside line seizure 0 = "0" outside line seizure	set	

### Entering a name on the digital keypad

1 ... 0

next

↑ next

clear

↑ clear

↑

If necessary, press several times, example: 1 = A  
11 = B  
111 = C  
1111 = 1

To the next entry field or automatically after a time out

To the previous entry field, character can be overwritten

Delete the flashing character

Clear complete entry

By pressing ↑ you change between small and capital letters. The display shows **ABC** or **abc**.

ABC 1 DEF 2 GHI 3

JKL 4 MNO 5 PQR 6

STU 7 VWX 8 YZ- 9

\* 0 □

Identification No. 523 712  
Modifications and errors reserved.  
Printed in Germany  
1992

AGFEO GmbH & Co. KG  
Gaswerkstr. 8  
D-33647 Bielefeld  
Internet:<http://www.agfeo.de>